


955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314
Email: service@johnnyseeds.com • Website: Johnnyseeds.com

Included Parts:

- | | |
|---|--|
| A. (1) Rolling Dibbler Wheel | G. (1) Axle for 10" inter-row spacing |
| B. (16) Dibbles | H. (2) Spacers for 10" inter-row spacing |
| C. (1) Clevis Pin | I. (1) Axle for 12" inter-row spacing |
| D. (1) Axle for 6" inter-row spacing | J. (2) Spacers for 12" inter-row spacing |
| E. (1) Axle for 8" inter-row spacing | K. (1) Accessory Pouch |
| F. (2) Spacers for 8" inter-row spacing | |

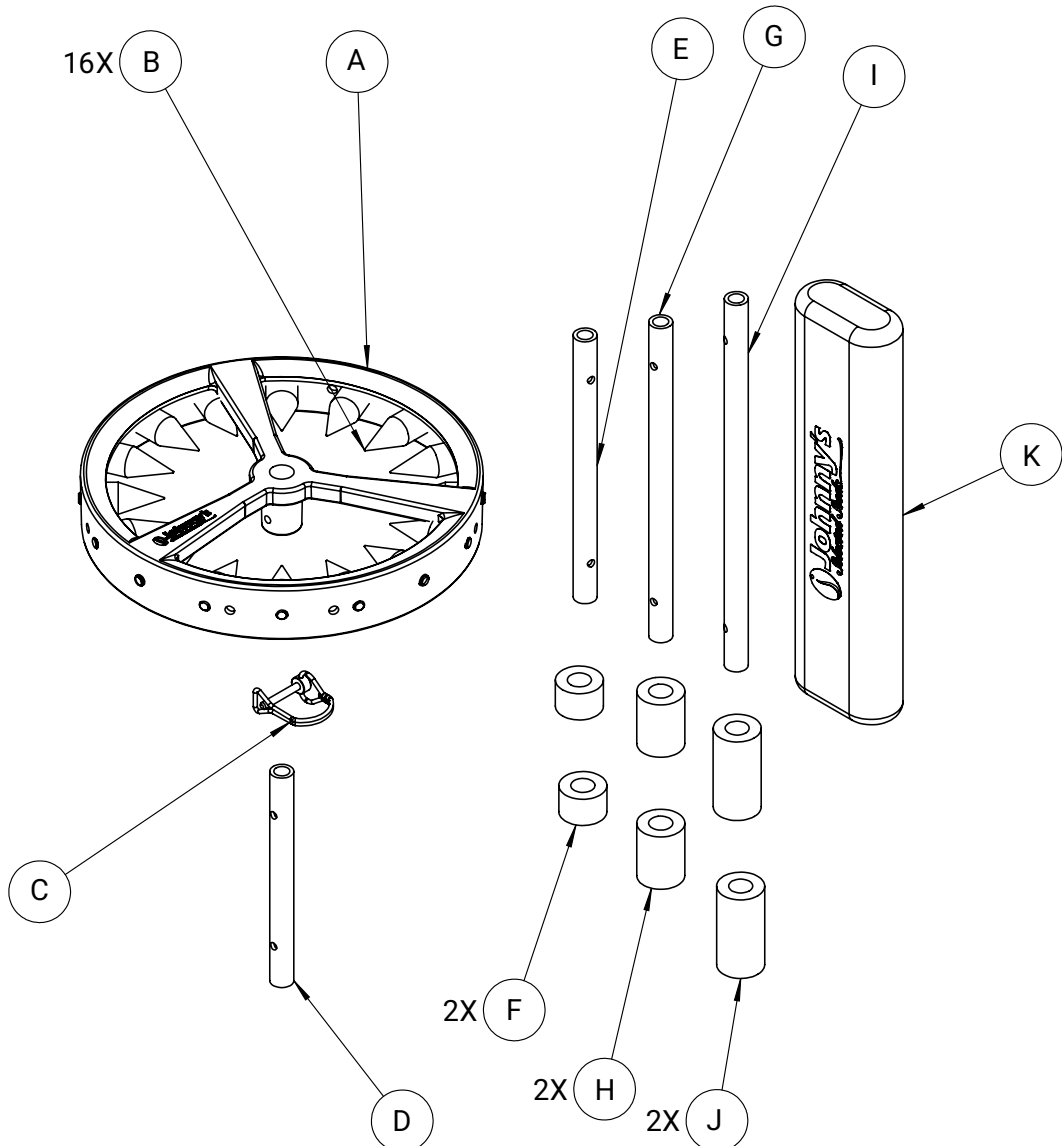

The **Johnny's Rolling Dibbler Two-Wheel Conversion Kit** turns your #6212 Johnny's Single-Row Rolling Dibbler into a two-wheel version with inter-row spacing of six, eight, ten or twelve inches.

Assembly Instructions:

- Remove the clevis pin from the wheel of your Johnny's Single Row Rolling Dibbler.
- Slide the axle out of the steel vertical handle.
- Choose your inter-row spacing and select the appropriate parts from the accessory pouch (K):
 - For 6" spacing between rows, use axle (D)
 - For 8" spacing between rows, use axle (E) and spacers (F)
 - For 10" spacing between rows, use axle (G) and spacers (H)
 - For 12" spacing between rows, use axle (I) and spacers (J)
- Return unused axles and spacers to the accessory pouch (K).
- Making sure the bushings are still installed in the steel vertical handle, slide the selected axle through the handle.
- Install spacers if necessary: slide spacers onto the axle, one spacer on either side of the steel vertical handle.
- Install one rolling dibbler wheel to each side of the axle and secure with clevis pins (C).
- Configure the dibles on each wheel to the desired in-row spacing. See the Johnny's Single Row Rolling Dibbler instructions for further information on spacing: Johnnyseeds.com/rolling-dibbler

