





955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314
Email: service@johnnyseeds.com • Website: Johnnyseeds.com

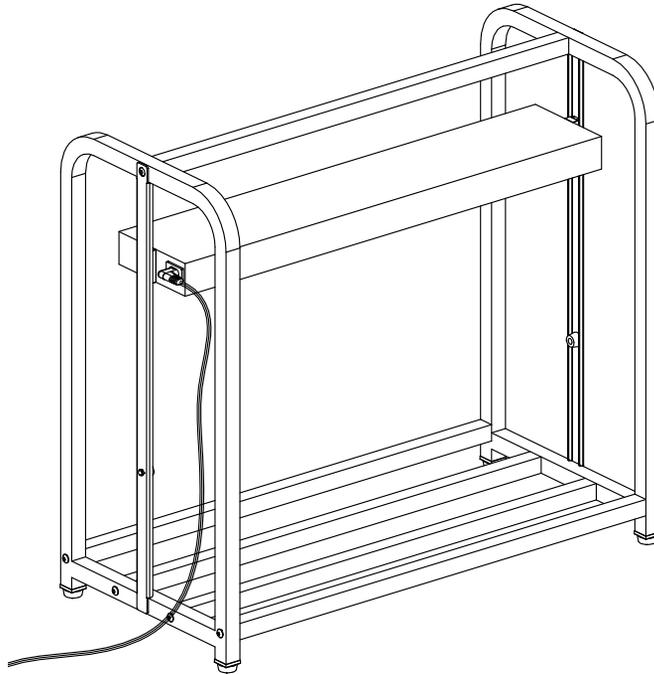




COMPONENTS INCLUDED:

- A. (2) Side Frames
- B. (5) Cross Bars
- C. (10) Screws – M8 x 35mm
- D. (1) 6mm Hex Key
- E. (4) Adjustable Feet
- F. (1) LED Light Fixture
- G. (1) Power Cord

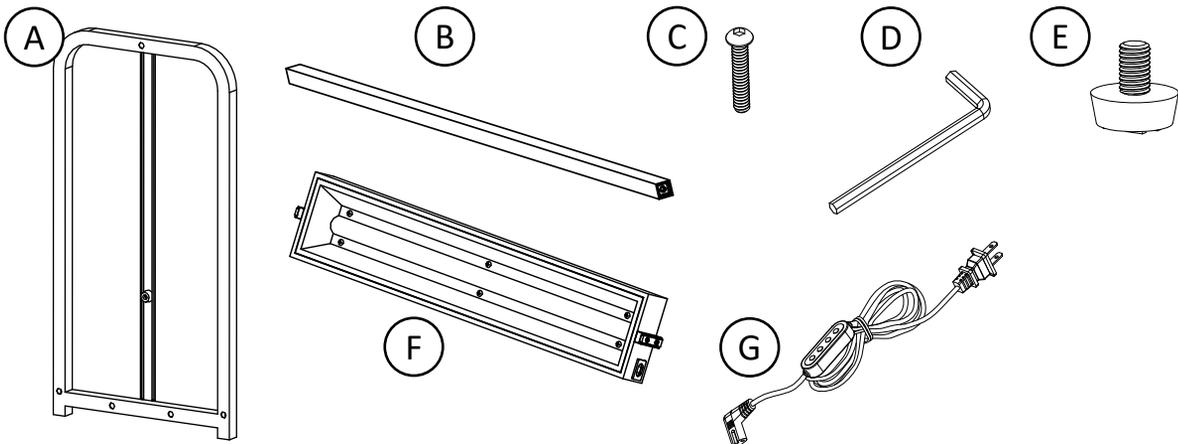




ASSEMBLY INSTRUCTIONS:

- 1) Assemble Side Frame (A) to the 5 Crossbars (B) using 5 Screws (C). Ensure that the "C" channel track in the middle bar of the Side Frame (A) faces inward toward the Crossbars. Secure the Screws (C) using the Hex Key (D). (See Fig. 1)
- 2) Attach the opposing Side Frame (A) to the Crossbars using (5) Screws (C). Again, ensure the "C" channel faces inward. Secure all Screws (C) using the Hex Key (D). (See Fig. 2)
- 3) Thread the (4) Adjustable Feet (E) into the bottom of the Side Frames (A). These are adjustable to allow leveling of the unit. (See Fig. 3)

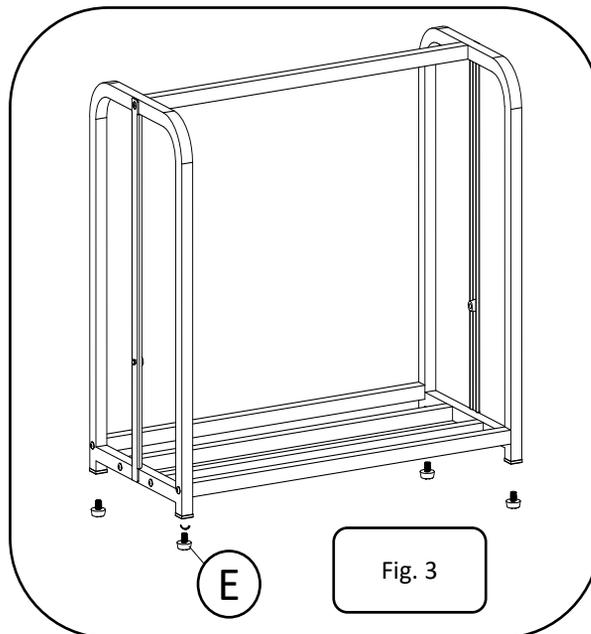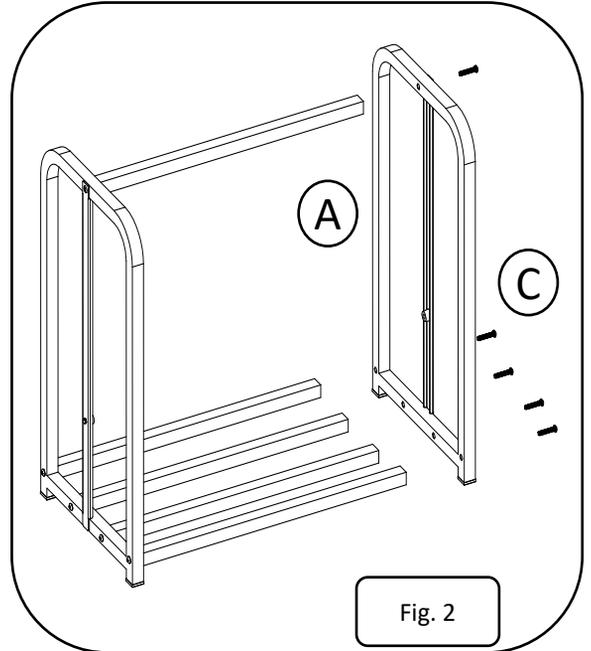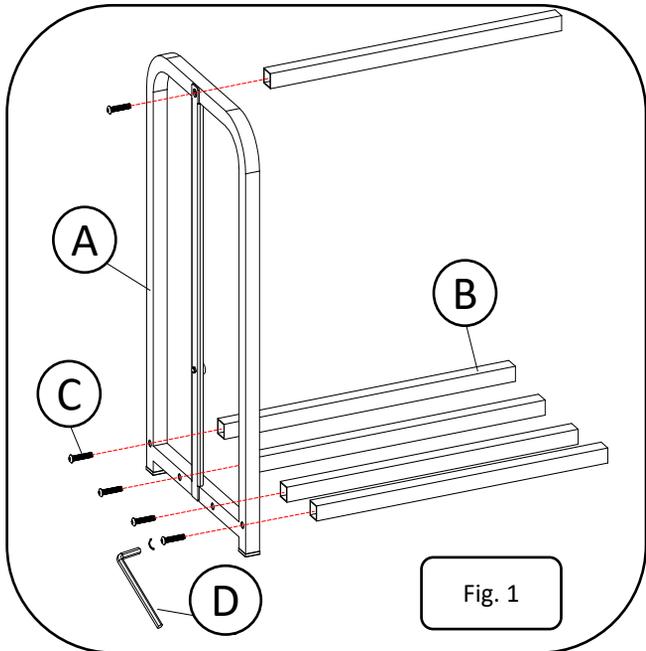


ASSEMBLY INSTRUCTIONS:

- 4) Tilt the LED Light Fixture (F) as shown in Fig. 4 to allow the magnets to fit between the “C” channel track in the middle of the Side Frames (A). Straighten the LED Light Fixture back to level. Check that it can smoothly move up and down to the desired height and that it does not slide down on its own. If it is too difficult to install or to move up and down, use a Phillips head screwdriver to tighten the screws in the magnet on each end. If it slides down on its own, loosen the screws. See Fig 5.
- 5) Connect the Power Cord (G) to the LED Light Fixture (F) and plug it into a standard 120V wall outlet. See Fig. 6.

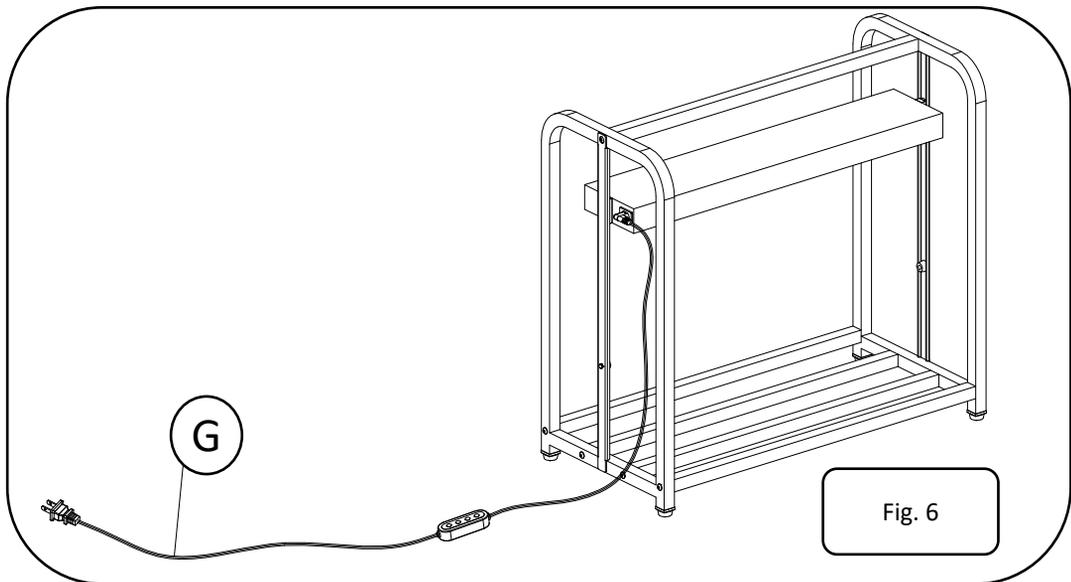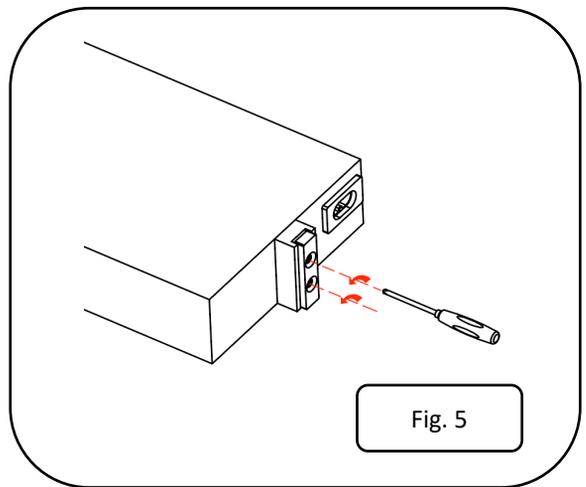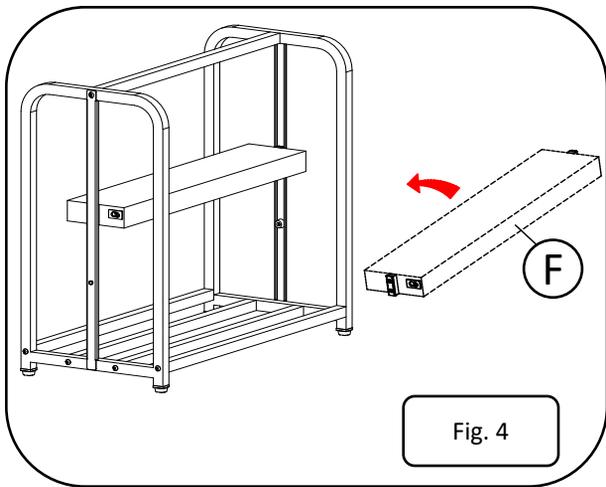

USE INSTRUCTIONS:

- 1) The frame is designed to hold standard 1020 trays or individual pots.
- 2) Slide the LED Fixture up and down to accommodate different plant heights.
- 3) The Power Cord includes a timer switch. The top button is for on/off power. The other button controls how long the light will stay on, with choices of 8, 12 and 16 hours. Small lights will indicate your selection. (See Fig. 7.)

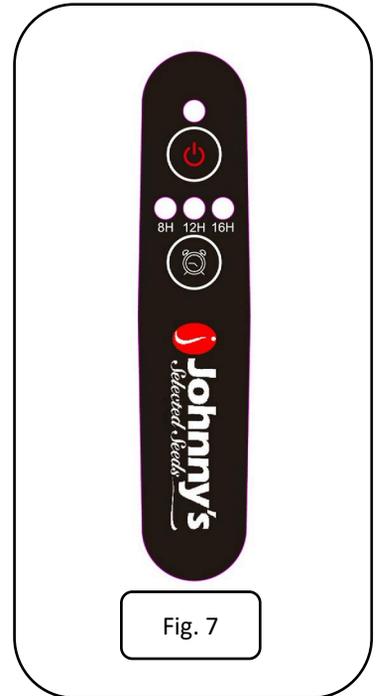

TROUBLESHOOTING:

- The light fixture does not stay at the correct height:
 - Check to make sure all screws are tightly secured.
 - Check that the vertical rails are straight and that the magnets are secure on the light fixture.
 - Check to make sure that the surfaces of the magnets are clean.
- The light will not turn on:
 - Confirm that the cord is secure on both ends and that the outlet has power.
- Contact Johnny's at 1-877-564-6697 if these solutions do not solve the issue or your issue is not listed.

WARNINGS:

- Do not spray water directly onto the LED Fixture.
- Turn off the power and unplug the fixture before performing any maintenance or cleaning.
- Avoid looking directly at the light source for extended periods.

MAINTENANCE:

- LED Light Fixtures should not require maintenance. Periodically wipe down LED Light Fixtures with a damp cloth and mild liquid detergent or glass cleaner.
- Do not attempt to repair or modify the Light Fixtures.