

955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314
Email: service@johnnyseeds.com • Web Site: Johnnyseeds.com

The standard wheel hoe combines a hoe blade with a wheeled frame to support the blade, and enables you to cover significantly more ground than with traditional hoes. With the double wheel conversion kit and the addition of 2 off-set hoes, the wheel hoe can straddle a row and weed on either side of the crop. This cuts cultivation time in half for many row crops.

Materials Included:

- A. Wheel with tire stem; inflate the tire to 30 psi per manufacturer
- B. Wheel axle (may already be installed on wheel)
- C. Wheel supports
- D. 4 – 115mm Bolts with nuts (17mm)
- E. 4 – 75mm Spacers (metal tubing)

Additional Material:

- 2 – 17mm/13mm Wrenches. Use wrenches included w/ original Wheel Hoe.

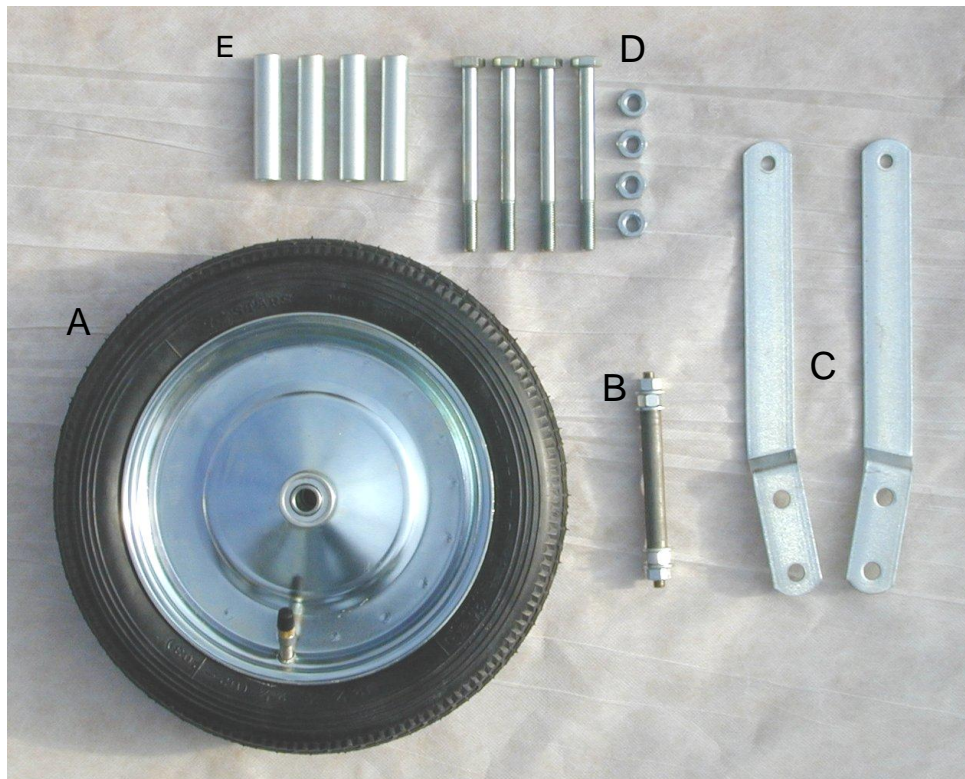


Figure 1. Double Wheel Hoe Conversion Kit Parts

ASSEMBLY INSTRUCTIONS:

1. Install wheel axle (B) to the wheel if not already installed.
2. Attach the wheel supports (C) to the wheel. The wheel supports, wheel, and wheel axle form the wheel assembly.
3. Remove the 20mm bolts and nuts holding the existing wheel assembly to the chassis of the wheel hoe.
4. Slide the 115mm bolts through the wheel supports using the spacers.
5. Attach to chassis with nuts.
6. Repeat steps 4 and 5 for the second wheel unit.
7. Refer to "Adjusting the Wheel Hoe", included with the assembly instructions for the wheel hoe, for final adjustments.



Figure 2.



Figure 3.