

955 Benton Ave., Winslow, ME 04901 U.S.A. • Phone: Toll-Free 1-877-564-6697 • Fax: 1-800-738-6314 • Web: Johnnyseeds.com • Email: service@johnnyseeds.com

EZ-FLO FERTILIZER INJECTOR COMPARISON CHART

		EZ-Flo Fertilizer Injector Model		
		Model #9205	Model #7160	Model #7162
Total Capacity (liquid)		Approximately 0.75 gal (2.8 L)	Approximately 1.0 gal (3.7 L)	Approximately 2.5 gal (9.5 L)
Fertilizer Capacity	(Refers to water-soluble fertilzier)	Maximum 5 lbs. (2.25 kg)	Maximum 7 lbs. (3.1 kg)	Maximum 10 lbs. (4.5 kg)
Pressure Rating *		Low (up to 50 PSI maximum)	High (up to 80 PSI maximum)	Low (up to 50 PSI maximum)
Minimum Water Flow Required		2.0 gal/min (7.6 L/min) via Standard Hose Bib 2.5 gal/hr (9.5 L/hr) via Ball Valve Coupling		
Adjustable Feed Ratio Range		Ratio of water to fertilizer adjustable from 1000:1 on Slow setting to 100:1 on Fast setting		
Water Volume to Empty Tank		750 gal (2.8 kl)/ Slow setting 75 gal (.28 kl)/ Fast setting	1,000 gal (3.7 kl)/ Slow setting 100 gal (.37 kl)/ Fast setting	2,000 gal (7.5 kl)/ Slow setting 200 gal (.75 kl)/ Fast setting
Physical Specifications		6" x 6" x 8"; 2 lbs. (15cm x 15cm x 20cm; .90 kg)	7" x 7" x 8"; 3 lbs. (18cm x 18cm x 20cm; 1.35 kg)	10" x 10" x 14"; 7 lbs. (25cm x 25cm x 35cm; 3.1 kg)
Includes:		Hose bib adapter with US standard threads, 1/4" nylon barbed tubing, and tubing valves.		
Additional Materials:		If the user's hose bib does not already have a backflow preventer, an anti-siphon valve (#9439) will also need to be purchased. If connecting to a sprinkler or drip system, the EZ-Flo Injector must be connected after a zone valve in the system; a ball valve slip coupling connector (#9486) is available for that.		

^{*}Low-pressure models can only be installed in on/off presure applications where the system is only under pressure when it is in use (ie, downstream of the control valve or timer). The high-pressure model can be installed in either constant pressure or on/off pressure applications.

