


OFFSET WIRE HOE ASSEMBLY INSTRUCTIONS

955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314 Email: service@johnnyseeds.com • Web Site: Johnnyseeds.com


Installing of Wire



- 1. Remove screw + nut.
- 2. Pull plug out.
- 3. Cut tie wrap.

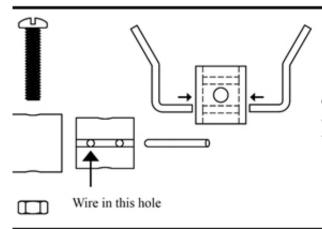

4. Insert wire ends into plug hole where arrow shows.



- 5. Insert plug into handle.
- **6.** Insert screw and nut.
- 7. Enjoy your new tool!

© 2020 Johnny's Selected Seeds. All rights reserved.