


955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314
Email: service@johnnyseeds.com • Web Site: Johnnyseeds.com

ASSEMBLY

1. Fasten the ¼" MPT outlet of the P.O.L. fitting onto the end of the regulator labeled "IN" using a small amount of sealing compound around the edge.
2. Secure the end of the ¼" MPT brass hex nipple onto the end of the regulator labeled "OUT" in the same fashion.
3. Next, secure and seal the other end of the ¼" MPT brass hex nipple to the end of your torch hose assembly.
4. Once the regulator is assembled, you may fasten it to your propane cylinder.

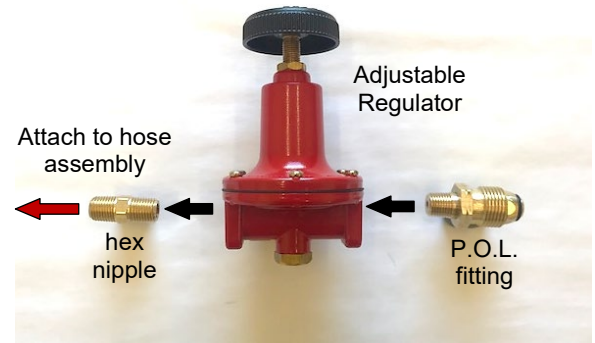

WARNING: You MUST use the sealing compound provided when connecting the regulator and fittings to the torch hose to avoid gas leaks.

05/15/2019 JG, ms


Copyright © 2019 Johnny's Selected Seeds. All rights reserved.

SEED BREEDERS, GROWERS, AND MERCHANTS SINCE 1973

955 Benton Ave., Winslow, ME 04901 • Phone: 1-877-564-6697 • Fax: 1-800-738-6314
Email: service@johnnyseeds.com • Web Site: Johnnyseeds.com

ASSEMBLY

1. Fasten the ¼" MPT outlet of the P.O.L. fitting onto the end of the regulator labeled "IN" using a small amount of sealing compound around the edge.
2. Secure the end of the ¼" MPT brass hex nipple onto the end of the regulator labeled "OUT" in the same fashion.
3. Next, secure and seal the other end of the ¼" MPT brass hex nipple to the end of your torch hose assembly.
4. Once the regulator is assembled, you may fasten it to your propane cylinder.

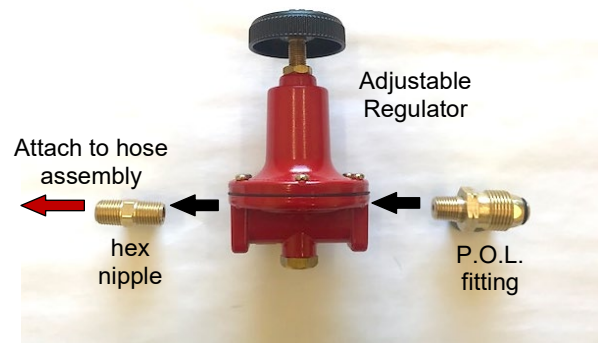

WARNING: You MUST use the sealing compound provided when connecting the regulator and fittings to the torch hose to avoid gas leaks.

05/15/2019 JG, ms

Copyright © 2019 Johnny's Selected Seeds. All rights reserved.

SEED BREEDERS, GROWERS, AND MERCHANTS SINCE 1973